



1369 N. Killian Drive, Lake Park, FL 33403

tel 561-845-7888 · fax 561-845-6777 · www.renntechmercedes.com

©Copyright 2010 Renntech, Inc. All rights reserved. Distribution of this document, including but not limited to distribution on the Internet is expressly prohibited unless approved in writing by Renntech, Inc.

Instructions for removing the ECU on GLK350 (X204)



Note: Before the removal of the ECU; we strongly recommend the key be completely removed from the ignition and that the vehicle's battery is disconnected in order to avoid possible damage to the sensitive electrical system.

1. Open the hood of the vehicle
2. Remove the engine cover
3. Remove the airbox in the center of the engine to gain access to the ECU



4. Unplug the ECU connectors (2)
5. Remove the ECU